


candu

Project 2:

Make your own marble effect resin bowl

Step 1

Measure out even amounts of part A and B in measuring cups. Pour part A into the mixing cup. Mix the main pigment (in this case, white) into the part A in the mixing cup. Keep adding pigment until the desired colour is reached.

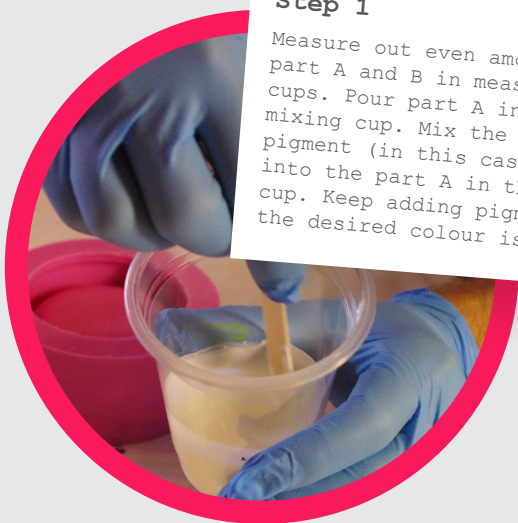

Step 2


Add part B to part A and mix thoroughly for 20 seconds.





Step 3

Put the second pigment (in this case, black) on the side of the mixing cup. Blend the main and second pigments together slightly so that a marble effect is created.

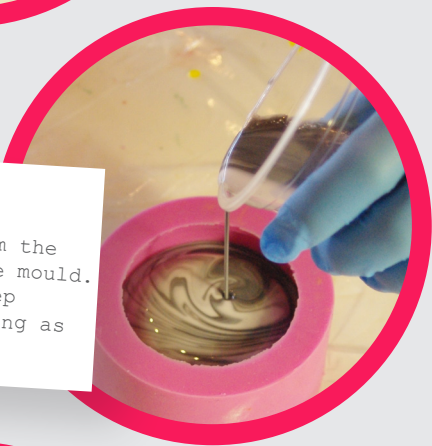

Step 4

Pour the resin from the mixing cup into the mould. The colour will keep marbling and swirling as it pours.



Step 5

Wait 20 minutes before demoulding. Then sand, and it is ready to use!

candu

www.candu.com.au

1300 810 602 info@candu.com.au